

# Children's Picnic Table

**Model: 02-3003**

Copyright © 2023 Gorilla Playsets  
All Rights Reserved



**51-3003**

166 Etowah Industrial Court  
Canton, GA 30114

[www.gorillaplaysets.com](http://www.gorillaplaysets.com)

REV A: 4/28/2023



Please inspect and inventory all parts immediately upon accepting delivery. Use the inventory pages in the manual to make sure you have received all necessary parts. The quickest method to get any parts that are missing or damaged is to use our “Quick Response Center” located at:

**[www.gorillaplaysets.com/customer-care](http://www.gorillaplaysets.com/customer-care)**

DO NOT RETURN THIS PRODUCT TO THE RETAILER OR CONTACT THE RETAILER DIRECTLY. THE RETAILER DOES NOT STOCK COMPONENTS.

PLEASE RETAIN ALL INSTRUCTIONS FOR FUTURE REFERENCE. KEEP THEM IN A SAFE PLACE WHERE YOU CAN REFER TO THEM AS NEEDED. CHECK FOR REVISED INSTRUCTIONS AT:

**[www.gorillaplaysets.com/assembly-manuals/](http://www.gorillaplaysets.com/assembly-manuals/)**

## GORILLA PLAYSETS WARRANTY – 2023

---

Gorilla Playsets® (“Gorilla”) warrants its play sets to be free from defects in workmanship and materials, under normal use and conditions, for 10 years for above ground structural wood components and for one year for all other components (e.g., swings, hardware, plastics, tarps, rope ladder, etc.).

Gorilla warrants all remaining products, including but not limited to its, Malibu Playhouse, Free Standing Swing Set, Free Standing Tire Swing, See-Saw, Children’s Picnic Table with Umbrella, Play-Zee-Bo™, Cedar Toy Chest, Interlocking Sandbox and spring riders to be free from defects in workmanship and materials, under normal use and conditions, for a period of 1 year.

**Cosmetic imperfections and natural tendencies of wood such as peeling, splintering, warping, seasonal checking or cracking, knots or knot holes, etc. are normal characteristics of all outdoor wooden play equipment and are not covered by this warranty. Checks or cracks in wood components that do not affect the intended function of the part, piece or overall swing set are not covered under this warranty.**

Wood rot or decay that develops because the product was installed in an area with poor drainage is not covered under this warranty. Lumber that has been damaged by wood boring bees, or conditions that develop as a result of faulty or improper installation of the product, are not covered by this warranty. Fading of stain, discoloration or mold on any wood part or accessory is not covered by this warranty. Cracks in plastic components, surface rust on hardware and chips on powder coated materials are not considered defects in material as long as they do not affect the functionality or structural integrity of the part or component.

It is the owner’s responsibility to maintain the swing set. **This includes but is not limited to staining and sealing the lumber as needed and regular inspection to be sure all hardware is tight.** Instructions for proper maintenance can be found on Gorilla’s website. Imperfections or conditions that develop because of a failure to properly maintain the swing set are not covered by this warranty.

Gorilla will, at its discretion, replace any above ground part within the stated warranty period that is defective in workmanship or materials. This decision is subject to verification of the defect, which, at Gorilla’s discretion, may be accomplished by submitting photographs or by delivery of the defective part to Gorilla Playsets • 166 Etowah Industrial Ct. • Canton, GA 30114 • 1-800-882-0272 Monday to Friday 9AM-5PM EST. Any warranty claim must include proof of purchase, including the date of purchase. **In addition, within the first 30 days from the date of purchase, Gorilla will replace any parts discovered to be missing from or damaged in the original packaging.**

This warranty is valid only if the product is used for the purpose for which it was designed and installed at a residential, single-family dwelling. This warranty is void if the product is used in a commercial, institutional or multi-family setting. **This warranty does not cover normal wear and tear or (a) products that have been damaged by acts of God and/or nature, negligence, misuse or accident; (b) products that have been modified or repaired by unauthorized persons; (c) the cost of labor; or (d) the cost of shipping any replacement product or part.**

GORILLA DISCLAIMS ALL OTHER REPRESENTATIONS AND WARRANTIES OF ANY KIND, EXPRESSED, IMPLIED, STATUTORY OR OTHERWISE, INCLUDING THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE. GORILLA WILL NOT BE LIABLE FOR ANY INCIDENTAL OR CONSEQUENTIAL DAMAGES. This warranty is non-transferable and does not extend to the owners of the product subsequent to the original purchaser. Some states do not allow limitations on implied warranties or exclusion of incidental or consequential damages, so these restrictions may not be applicable to you. This warranty gives you specific legal rights. You may also have other rights which vary from state to state.

# IMPORTANT SAFETY GUIDELINES

This product is recommended for use by children ages 3-11. This product is intended for residential use only and not intended for use in any public setting. A safety surface such as mulch or recycled tire should be used under the play set to prevent injury from falls. Also a 6 foot safety zone should be used around the entire play set.

As with any home project, good judgment and respect for power tools will greatly reduce the risk of injury. Gorilla recommends you follow all tool manufacturers' safety guidelines. Always wear eye protection and safety gloves to prevent injury. In several phases of construction two people may be required for lifting and securing of lumber. While the play set is being constructed, please keep children off the equipment until the project is complete. Bolts and screw heads should be checked regularly for tightness. The ground ladder, rope ladder, slide, swings and other areas where children spend a majority of their playtime should be checked more frequently.

Gorilla shall not be liable for incidental, indirect or consequential damages or injuries that result from building and/or playing on our play sets. Adult supervision is recommended anytime a play set is being used.

## WEIGHT LIMITS FOR GORILLA PLAYSETS

- FORT PLATFORMS: 800 LBS. TOTAL WEIGHT
- SWING BELT: 225 LBS.
- TANDEM SWINGS: 70 LBS. PER CHILD. UP TO 140 LBS. TOTAL WEIGHT.
- TRAPEZE: 125 LBS.
- FULL BUCKET SWING/ HALF BUCKET SWING: 50 LBS.
- HEAVY DUTY TODDLER BUCKET SWING: 85 LBS.
- INFANT SWING: 35 LBS.
- TIRE SWING: 125 LBS. TOTAL WEIGHT
- ROPE LADDER: 75 LBS.
- ROCK WALL: 150 LBS.
- CLIMBING RAMP: 150 LBS.
- MONKEY BARS: 175 LBS.
- ALL SLIDES: 150 LBS.

Gorilla recommends that the weight limits for all components must not be exceeded. Failure to adhere to these and other safety guidelines could result in damage to the play set and injury to the users.

# PRODUCT REGISTRATION

## - CHILDREN'S PICNIC TABLE -

Gorilla Playsets™ manufactures the finest quality products that are designed for outstanding strength and durability. We back our products with unparalleled warranties. In the unlikely event that you need to contact us about covered repairs, we must have a valid Product Registration on file.

3 EASY WAYS TO REGISTER	
<b>OPTION 1</b>	Complete the online registration form at: <b><a href="https://www.gorillaplaysets.com/product-registration">https://www.gorillaplaysets.com/product-registration</a></b>
<b>OPTION 2</b>	Fax this completed form to: <b>(678) 880-3300</b>
<b>OPTION 3</b>	Mail this completed form to: <b>Gorilla Playsets</b> <b>166 Etowah Industrial Court</b> <b>Canton, GA 30114</b>

### Where did you buy this product?

Date of Purchase \_\_\_\_\_ Store \_\_\_\_\_ Store City \_\_\_\_\_ Store State \_\_\_\_\_

### Your registration information:

Name: \_\_\_\_\_ Email: \_\_\_\_\_

Address: \_\_\_\_\_

Street

City

State

Zip

Please select  18-30  41-50  
your age  31-40  51+

How old are  2-3  6-7  
your children?  4-5  8+

Number of   
children

How would  ★ ★ ★ ★ ★ Excellent  
you rate the  ★ ★ ★ ★ Above Average  
quality of this  ★ ★ ★ Average  
product?  ★ ★ Below Average  
 ★ Poor

Would you recommend this product to friends & family?  Yes  No

May we add you to our mailing list?  Yes  No

May we use your comments on websites or other marketing materials?  Yes  No

Comments: \_\_\_\_\_

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

**THIS PAGE INTENTIONALLY LEFT BLANK**

## **IMPORTANT – PLEASE READ**

Congratulations! You have just purchase one of the finest residential wooden swing sets available today. As with any wooden product that spends its entire life outside, in varying elements, it is important to know what to expect with your new swing set so that your family can enjoy it for many years.

As your swing set acclimates to its new environment, natural characteristics of the wood can show in the form of checks, or “cracks” in the lumber. In almost all cases this is normal and it will not affect the structural integrity of your play set and is not covered under warranty.

## **KEEPING YOUR PLAYSET LIKE NEW**

### **MUST DO’s**

**The following owner responsibilities are crucial to the safety, integrity and aesthetic appeal of your swing set and may affect the warranty if not adhered to.**

#### **WITHIN 60 DAYS**

- Check and tighten Hex Bolts/T-nuts, Carriage Bolts/Lock-nuts, and Lag Screws within the first 60 days and then twice annually – once before each season and then once during the season.

#### **WITHIN 90 DAYS**

- Apply a **sealant** or **semi-transparent stain with sealant** within the first 90 days of owning the swing set. Our own Stain/sealant is available online here: <http://www.gorillaplaysets.com/Playground-Sealant-p/10-0003.htm>

Oil based stain or water based stain may be used. Should you choose to use other stain we suggest asking the product covering specialists at any number of specialty paint stores or home improvement centers for a product that would work best for your local environment. \*\* TIP – while the set is new, take a small board from the store with you so they can color match the tint of the stain or sealant.

#### **SEASONAL REMINDERS**

- If your area experiences regular snowfall, remove your fabric tarp/canopy to avoid stretching, sagging or tearing of the material. Store it inside, folded up, and it will be as good as new when winter is over.
- If your area experiences extremely cold temperatures, remove swing belts and other pliable features to prolong the lifespan of these play activities.

#### **OTHER TIPS**

- Spray swing hangers with Pam, Mazola or olive oil to stop squeaking; do not use petroleum based products such as WD-40 or motor oil.
- To repel yellow jackets and wasps, use a cotton ball and dab interior wooden corners underneath the play set deck with a liquid dish soap. Avoid using insecticides.
- To speed up the slide wipe the center of slide with wax paper every 2 - 3 weeks.

For additional safety and maintenance guidelines, please visit our website.



# IMPORTANT DOCUMENTS

## CUSTOMER MUST READ AND RETAIN

Please go to the following links and read important SAFETY information prior to using your new play structure.

<http://www.gorillaplaysets.com/safety-tips/>

<https://www.gorillaplaysets.com/suggested-maintenance>

<http://www.gorillaplaysets.com/assembly-manuals/>

(Click on your specific model)

<http://www.gorillaplaysets.com/warranty/>

**NOTE:** Your children's safety is our #1 concern. Observing the following statements and warnings reduces the likelihood of serious injury. Please review these safety rules regularly with your children.

### **WARNING:**

*Children must NOT use this play set until it has been completely assembled and inspected by an adult to ensure it has been properly installed.*


Gorilla Playsets  
166 Etowah Industrial Court  
Canton, GA. 30114

Picnic Table  
Hardware  
REV: A  
7/11/2013 JH

#8 x 1-3/4"  
WOOD SCREW  
QTY: 10




#8 X 2"  
WOOD SCREW  
QTY: 38

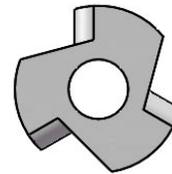

5/16" T-NUT  
QTY: 12




5/16 X 2"  
HEX BOLT  
QTY: 12

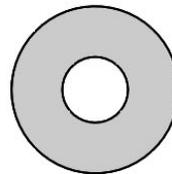







5/16" WASHER  
QTY: 12






#2 SQUARE  
DRIVE BIT  
QTY: 1

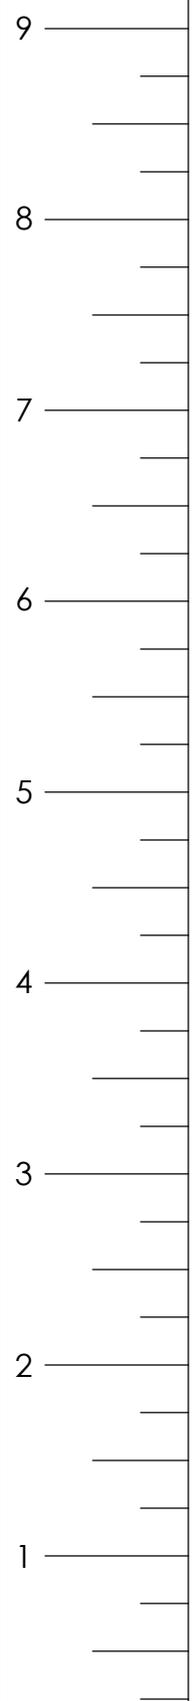


USE THE RULER TO THE RIGHT TO MEASURE YOUR BOLTS AND SCREWS. PICTURE VIEWS SHOWN ABOVE ARE 1:1 SCALE AND CAN BE USED TO MATCH BOLT AND SCREW SIZES.

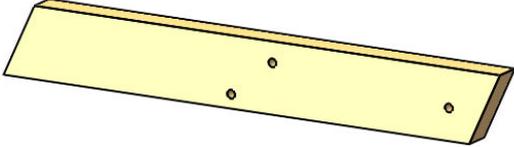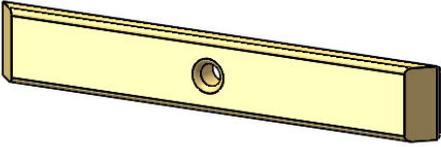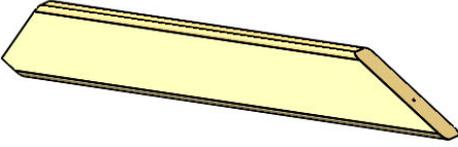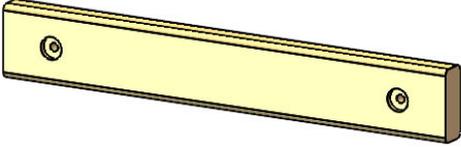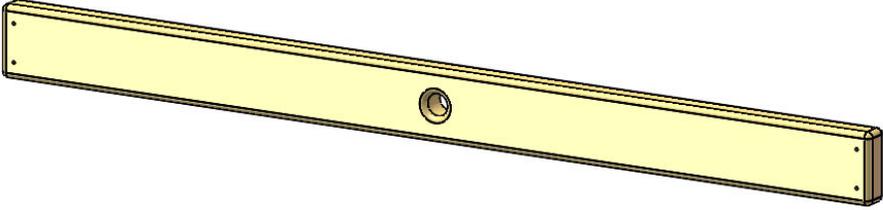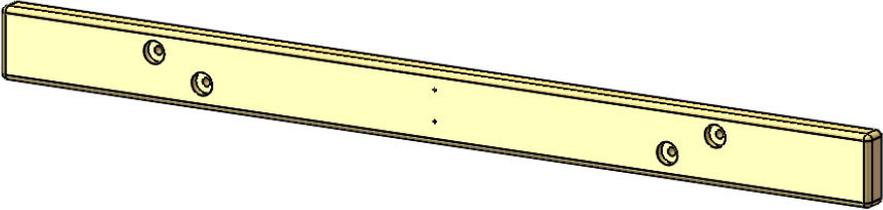PICTURE	DESCRIPTION	QTY.
	2 X 4 X 23-13/16" TABLE LEG	4
	2 X 4 X 21" TABLE STRINGER	1
	2 X 4 X 21-1/2" ANGLE SUPPORT	2
	2 X 4 X 21-3/8" TOP LEG SUPPORT	2
	2 X 4 X 42" CENTER LEG SUPPORT	1
	2 X 4 X 42" SEAT SUPPORT	2
		10

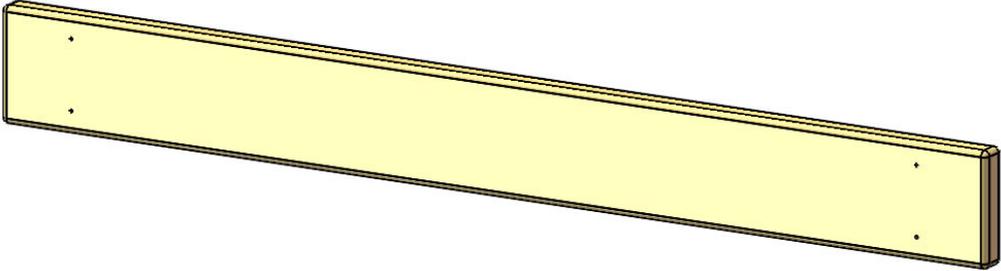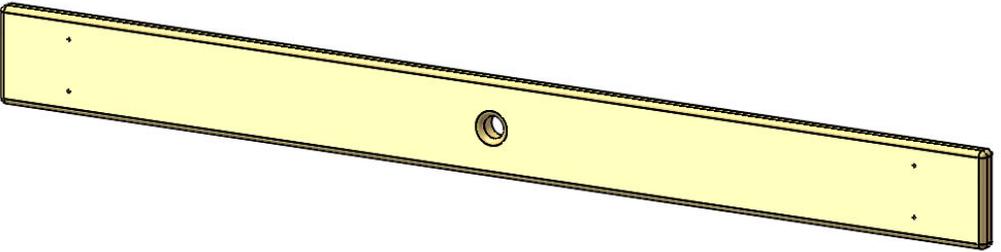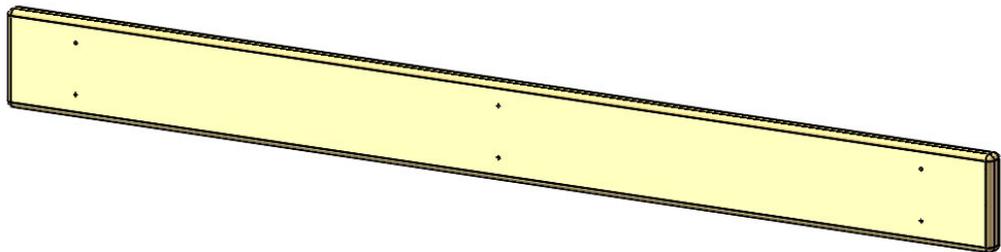PICTURE	DESCRIPTION	QTY.
	<p>2 X 6 X 47-5/8" TABLE SEAT</p>	<p>2</p>
	<p>5/4 X 5 X 47-5/8" CENTER TABLE TOP</p>	<p>1</p>
	<p>5/4 X 5 X 47-5/8" TABLE TOP</p>	<p>4</p>
	<p>UMBRELLA ASSEMBLY</p>	<p>1</p>

## STEP 1: LEG ASSEMBLY

- 1: FIND TWO 2 X 4 X 23-13/16" TABLE LEGS. NOTE THE HOLE PATTERN ON THE LEGS AND POSITION THEM SO THAT THE END WITH ONE HOLE WILL BE AT THE TOP. THE ORIENTATION OF THE LEGS SHOULD LOOK LIKE THE SIDES OF THE LETTER "A".
- 2: DETERMINE WHICH SIDE WILL BE FACING THE INSIDE OF THE TABLE AND PLACE A T-NUT IN EACH OF THE HOLES. SET THE T-NUTS WITH A HAMMER UNTIL THEY ARE FLUSH/ALMOST FLUSH WITH THE FACE OF THE BOARD.
- 3: FIND A 2 X 4 X 21-3/8" TOP LEG SUPPORT BOARD AND LINE UP THE HOLES WITH THE HOLES AT THE TOP OF THE TABLE LEGS AND FASTEN WITH 5/16 X 2" HEX BOLTS AND 5/16" WASHERS.
- 4: FIND A 2 X 4 X 42" SEAT SUPPORT AND LINE UP THE HOLES IN THE SEAT SUPPORT WITH THE HOLES IN THE TABLE LEGS. FASTEN THE SEAT SUPPORT TO THE TABLE LEGS WITH 5/16 X 2" HEX BOLTS AND 5/16" WASHERS.
- 5: REPEAT THIS PROCESS TO CREATE ANOTHER SET OF LEGS FOR THE OTHER SIDE OF THE TABLE.

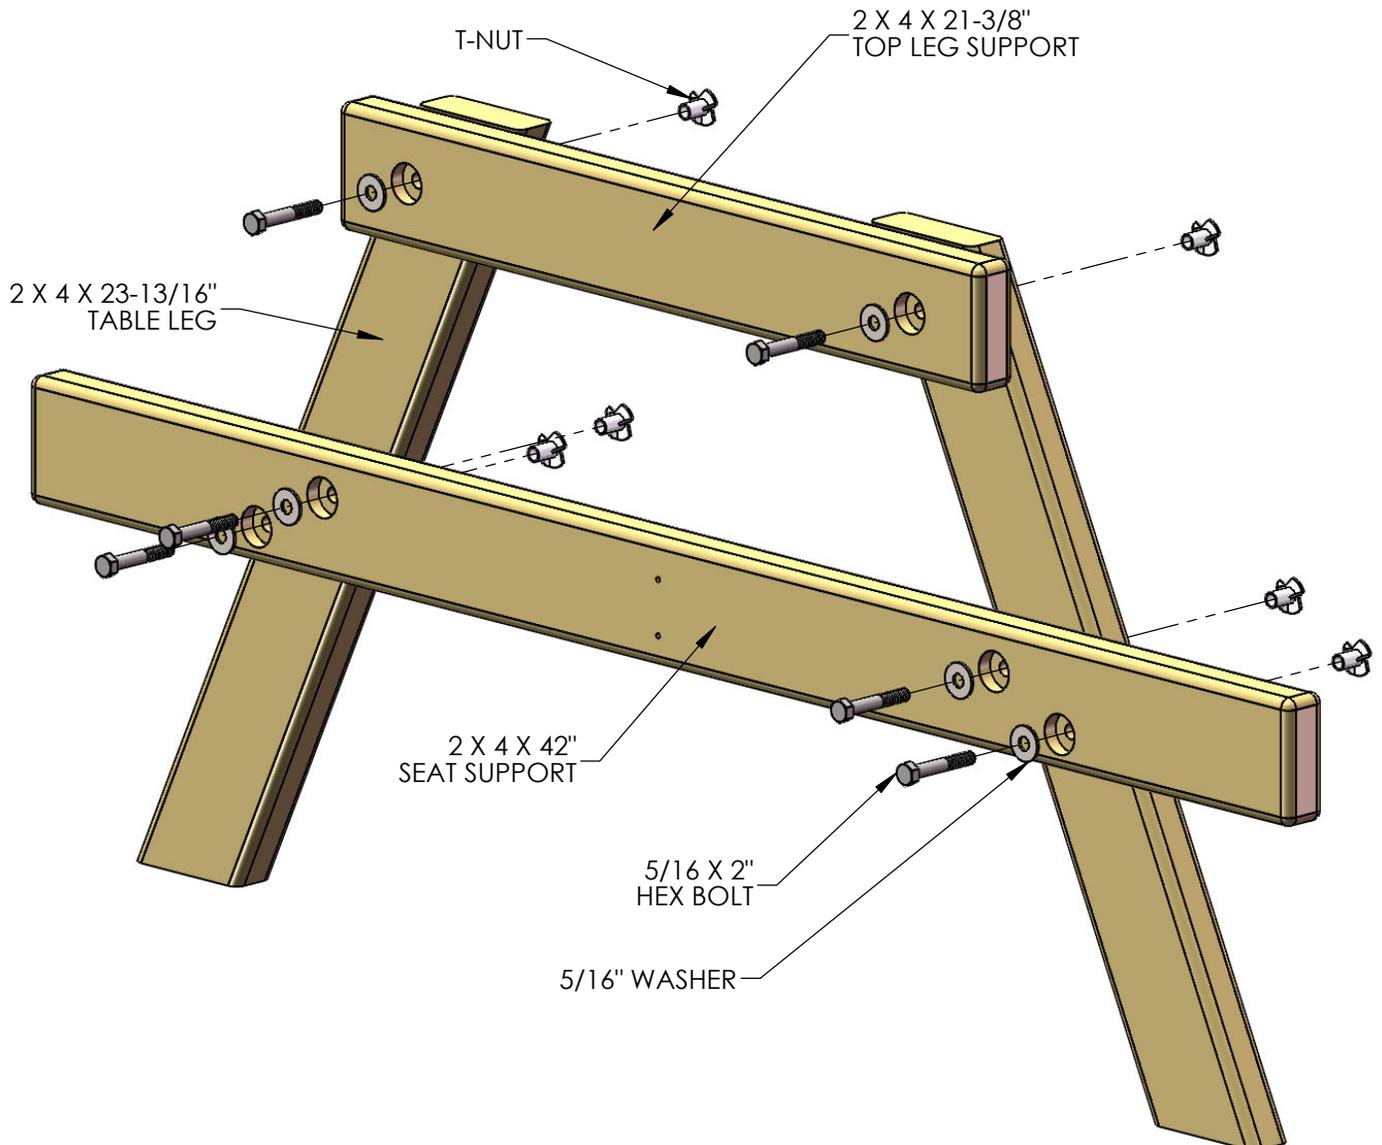

## STEP 2: CENTER LEG SUPPORT

1: FIND THE 2 X 4 X 42" CENTER LEG SUPPORT. TAKE NOTE OF THE TWO HOLES DRILLED IN EACH END OF THE BOARD. ALSO THE ROUNDED OVER EDGE ON THE LARGE HOLE AT THE CENTER OF THE BOARD SHOULD FACE UP.


2: CENTER THE LEG SUPPORT UNDERNEATH THE SEAT SUPPORTS OF THE LEG ASSEMBLIES CREATED IN THE PREVIOUS STEP. EACH END OF THE BOARD SHOULD BE FLUSH WITH THE OUTSIDE SURFACE OF THE 2 X 4 X 42" SEAT SUPPORT. ATTACH THE LEG SUPPORT TO THE SEAT SUPPORTS WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.

END OF CENTER LEG SUPPORT  
FLUSH TO OUTSIDE SURFACE OF  
SEAT SUPPORT.

ROUNDED HOLE EDGE FACES UP.

2 X 4 X 42"  
CENTER LEG SUPPORT

2" WOOD SCREW

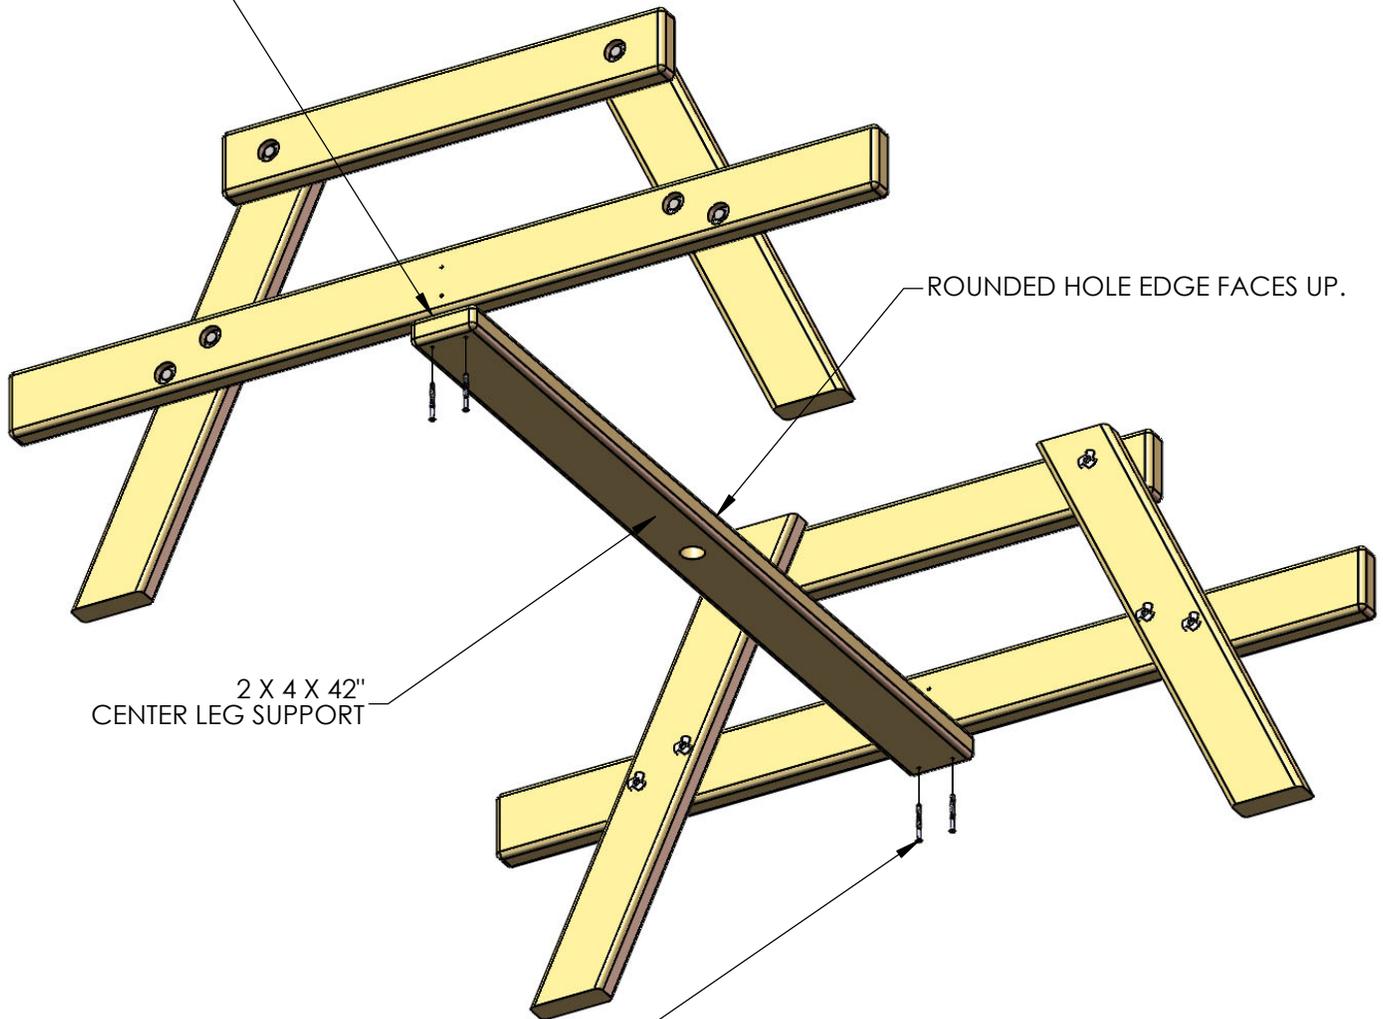


## STEP 3: TABLE TOP

1: FIND ONE 5/4 X 5 X 47-5/8" CENTER TABLE TOP BOARD AND FOUR 5/4 X 5 X 47-5/8" TABLE TOP BOARDS. THE CENTER BOARD WILL HAVE A HOLE DRILLED ON-CENTER IN THE MIDDLE OF THE BOARD, AND ALL OF THE BOARDS WILL HAVE PRE-DRILLED HOLES IN EACH END.

2: CENTER THE HOLES IN THE CENTER TABLE TOP BOARD OVER THE CENTER OF THE 2 X 4 X 25-3/8" TOP LEG SUPPORT. MAKE SURE THE HOLE AT THE CENTER OF THE BOARD HAS THE ROUNDED OVER EDGE FACING UP.

3: PLACE THE FOUR TABLE TOP BOARDS ON TOP OF THE TOP LEG SUPPORTS. SPACE THEM EVENLY SO THAT THE BOARDS AT THE END OF THE TABLE TOP ARE FLUSH TO THE ENDS OF THE TOP LEG SUPPORT. ATTACH EACH BOARD WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.

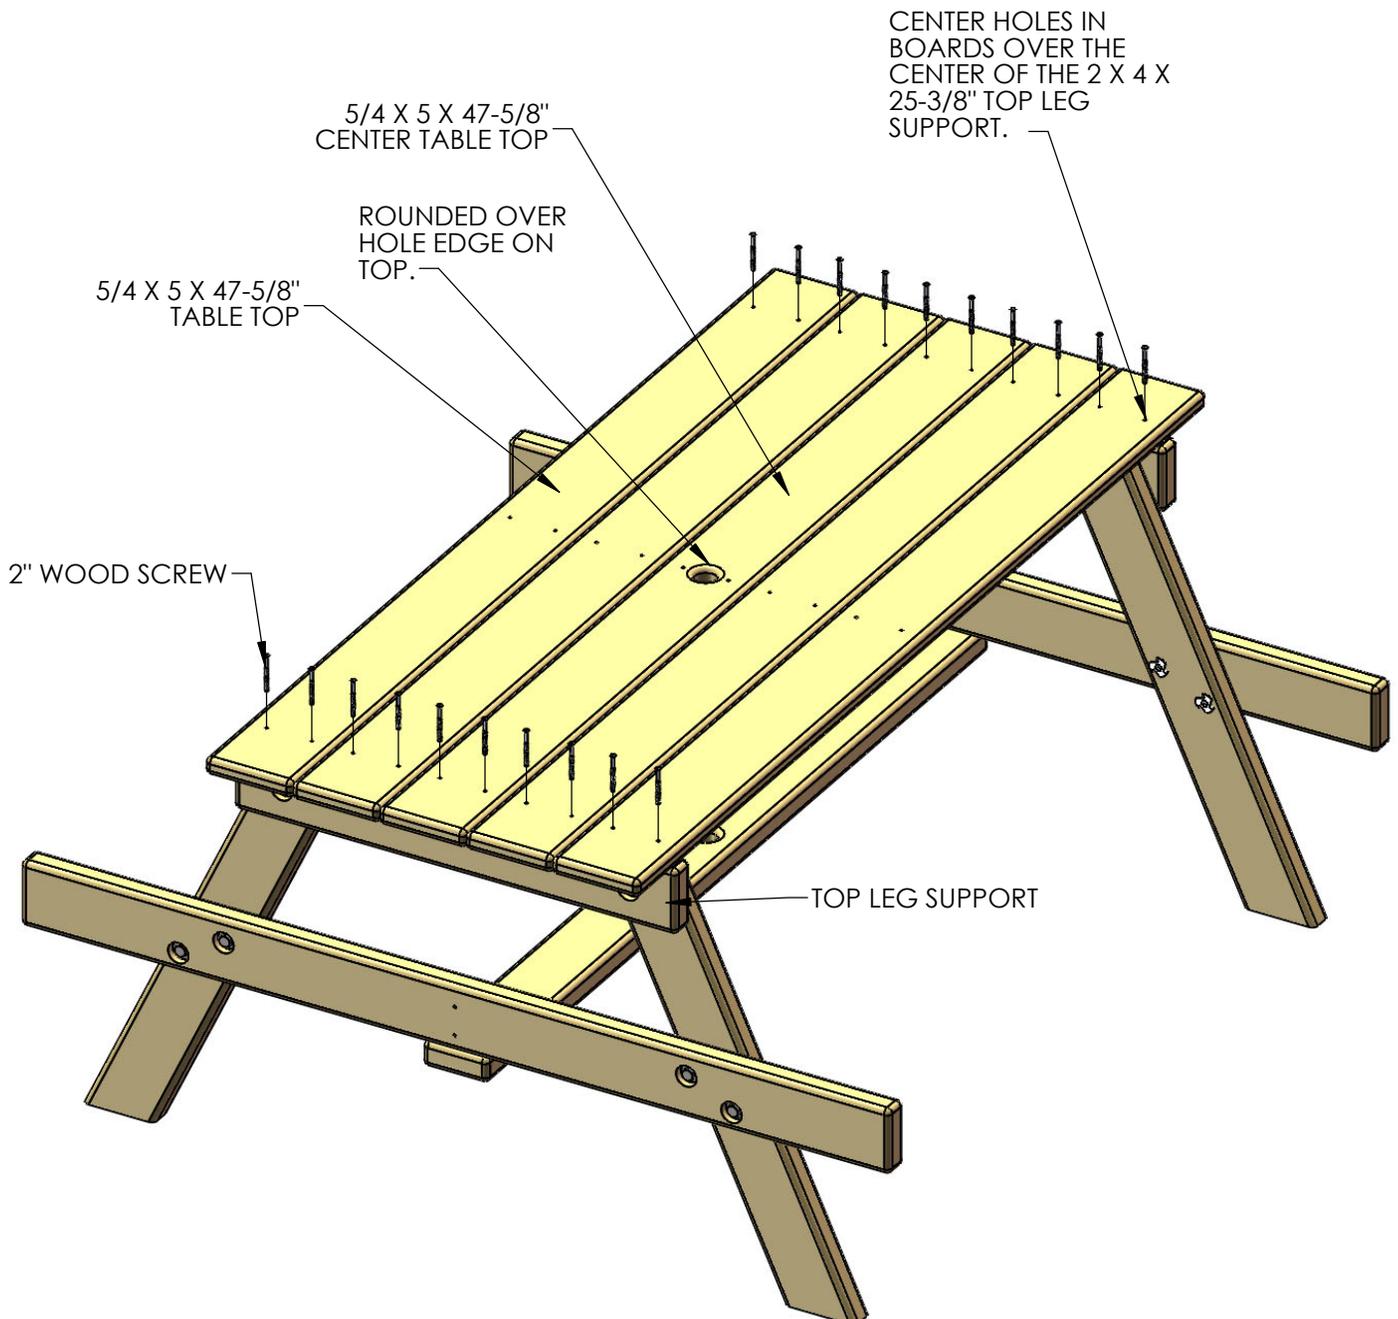


## STEP 4: TABLE STRINGER

1: FIND THE 2 X 4 X 21" TABLE STRINGER. NOTE THE ANGLED ENDS OF THE BOARD, AND THE HOLE IN THE CENTER.

2: POSITION THE TABLE STRINGER SO THAT THE HOLE IN THE CENTER OF THE BOARD LINES UP WITH THE HOLE IN THE CENTER OF THE PICNIC TABLE, AND THE ANGLED ENDS ARE FACING DOWN.

3: FROM THE TOP OF THE TABLE ATTACH THE TABLE STRINGER WITH TWO 1-3/4" WOOD SCREWS PER BOARD.

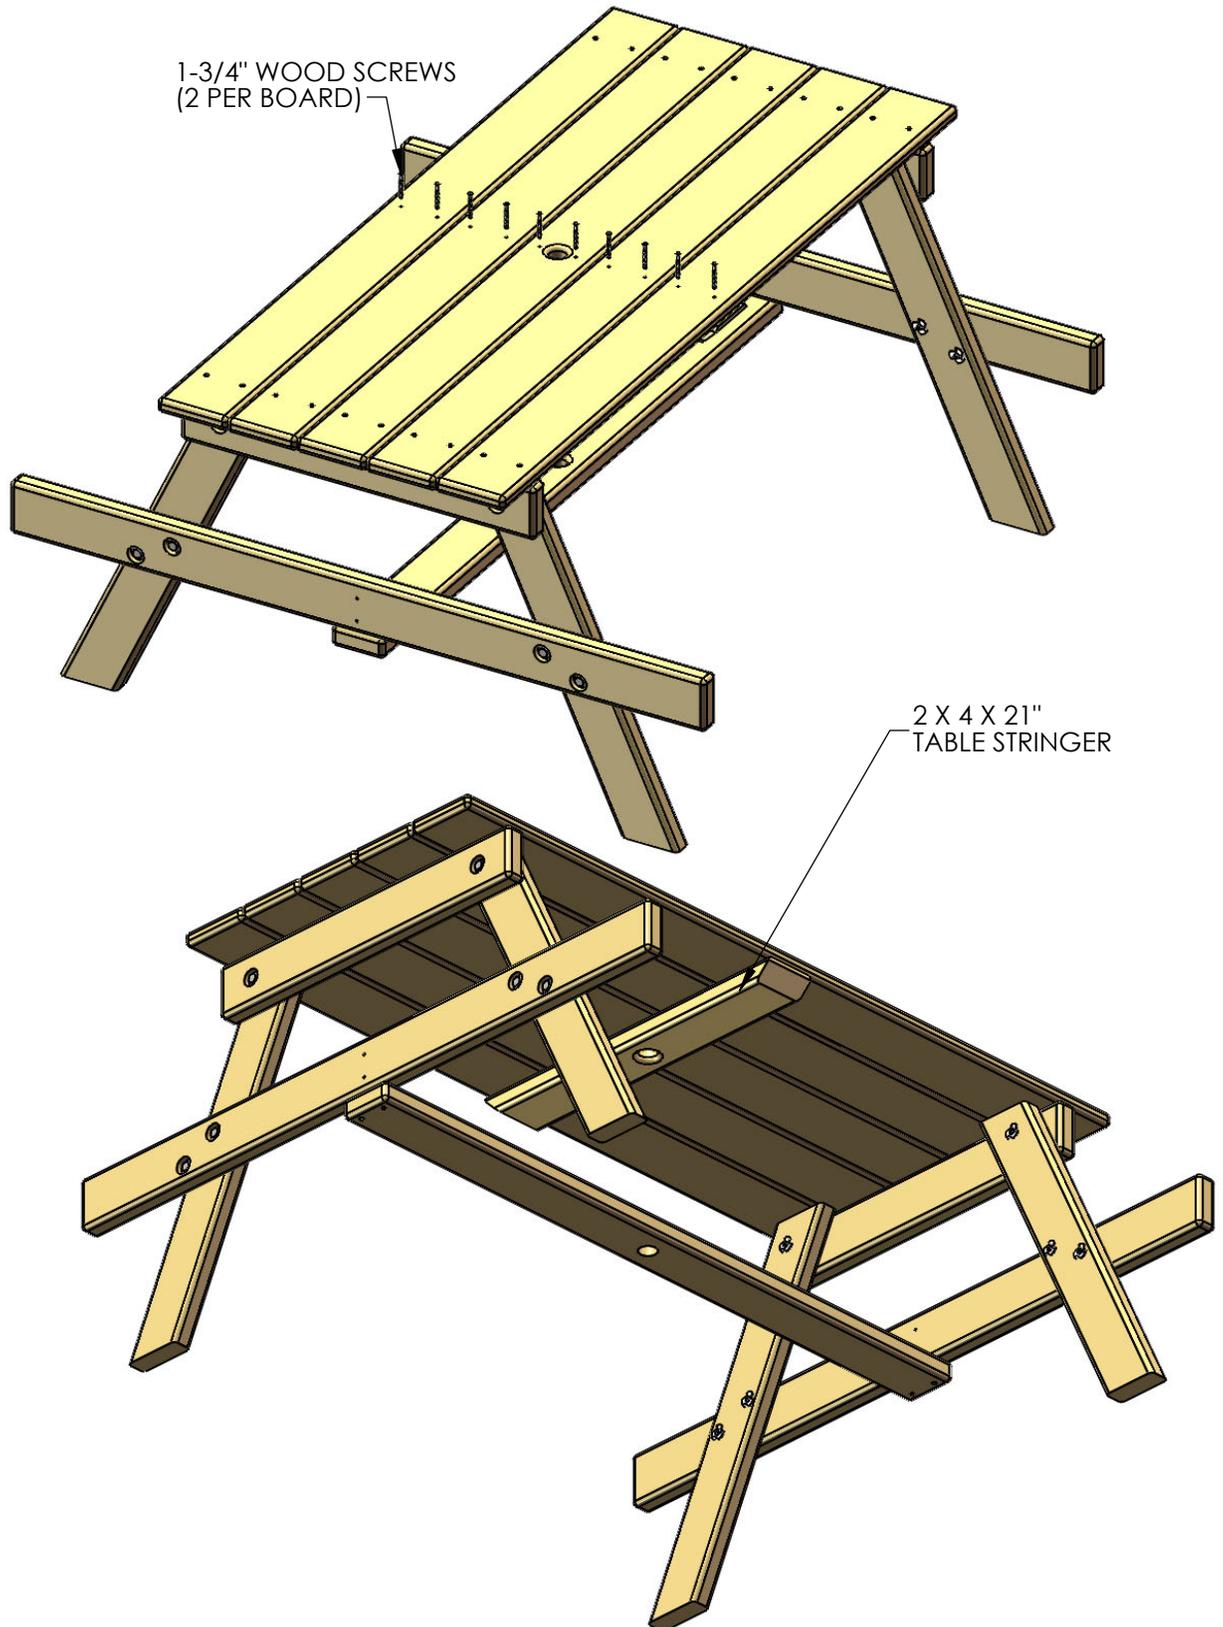


## STEP 5: ANGLE SUPPORTS

1: FIND TWO 2 X 4 X 21-1/2" ANGLE SUPPORTS. NOTE THE ANGLED ENDS OF THE BOARDS.

2: POSITION THE ANGLE SUPPORTS SO THAT THE LONG ANGLED END OF THE BOARD IS RESTING AGAINST THE BOTTOM OF THE TABLE TOP. THE BOTTOM END WILL REST UPON ON THE CENTER LEG SUPPORT AND WILL BE FLUSH TO THE SEAT SUPPORT. CENTER THE BOTTOM END ON THE TWO PRE-DRILLED HOLES IN THE SEAT SUPPORT.


3: USE 2" WOOD SCREWS IN THE PRE-DRILLED HOLES ON THE LONG ANGLED END OF THE ANGLE SUPPORT AND IN THE PRE-DRILLED HOLES IN THE SEAT SUPPORT.

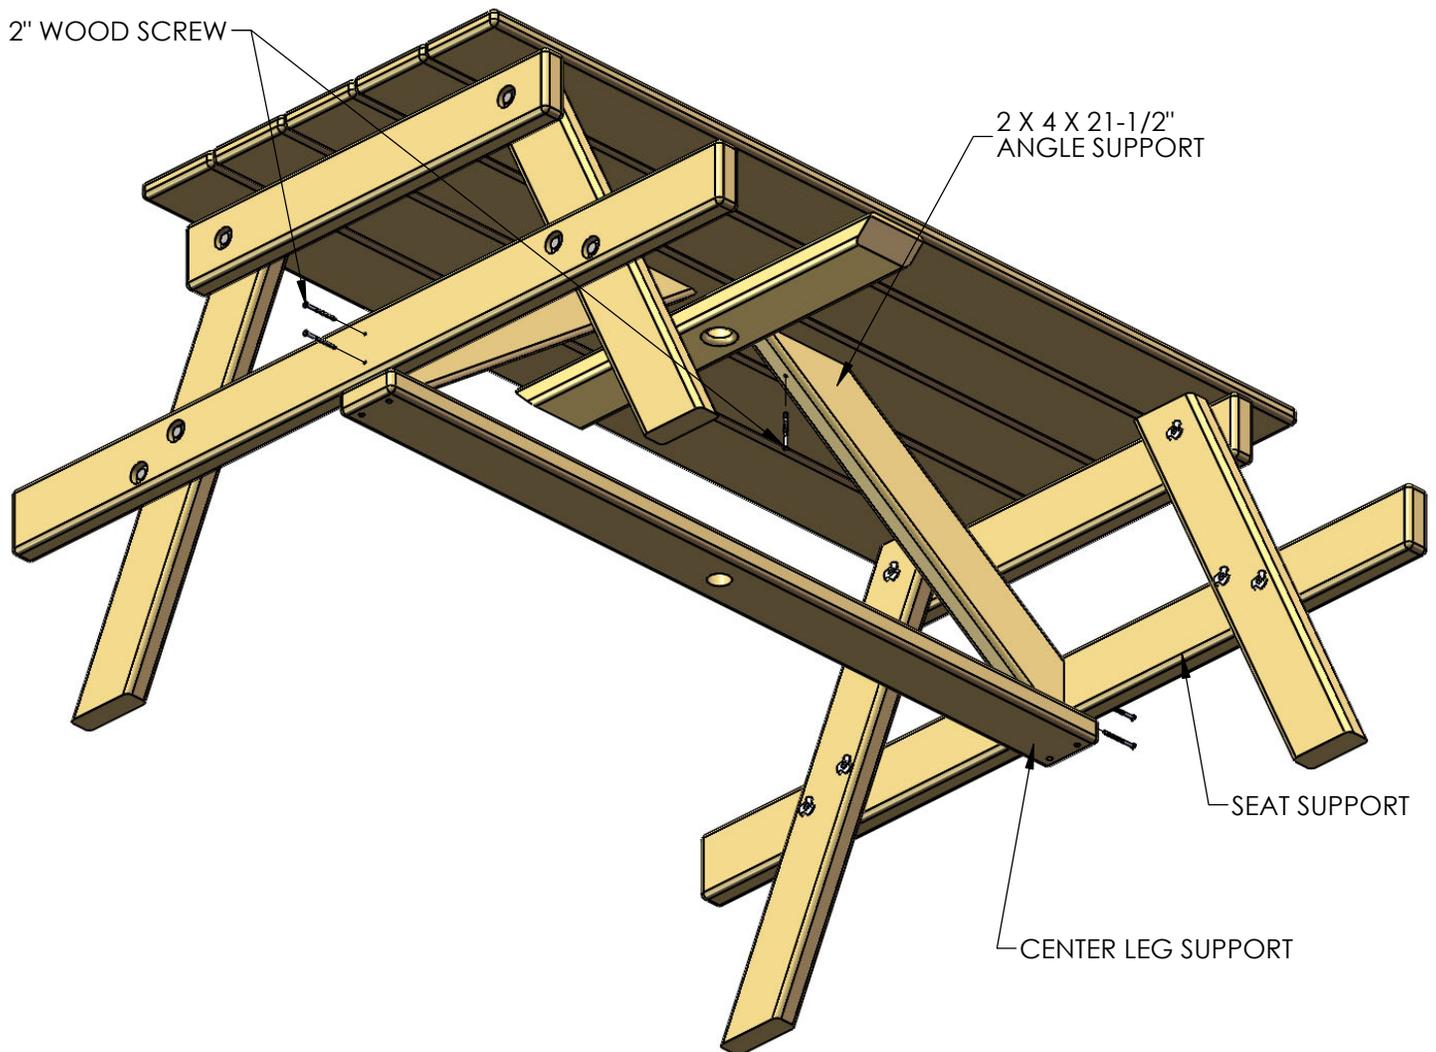

## STEP 6: SEATS

1: FIND THE 2 X 6 X 47-5/8" TABLE SEATS. NOTE THE PRE-DRILLED HOLES ON EACH END.

2: CENTER THE SEATS AT THE ENDS OF THE SEAT SUPPORTS AND ATTACH WITH 2" WOOD SCREWS IN THE PRE-DRILLED HOLES.

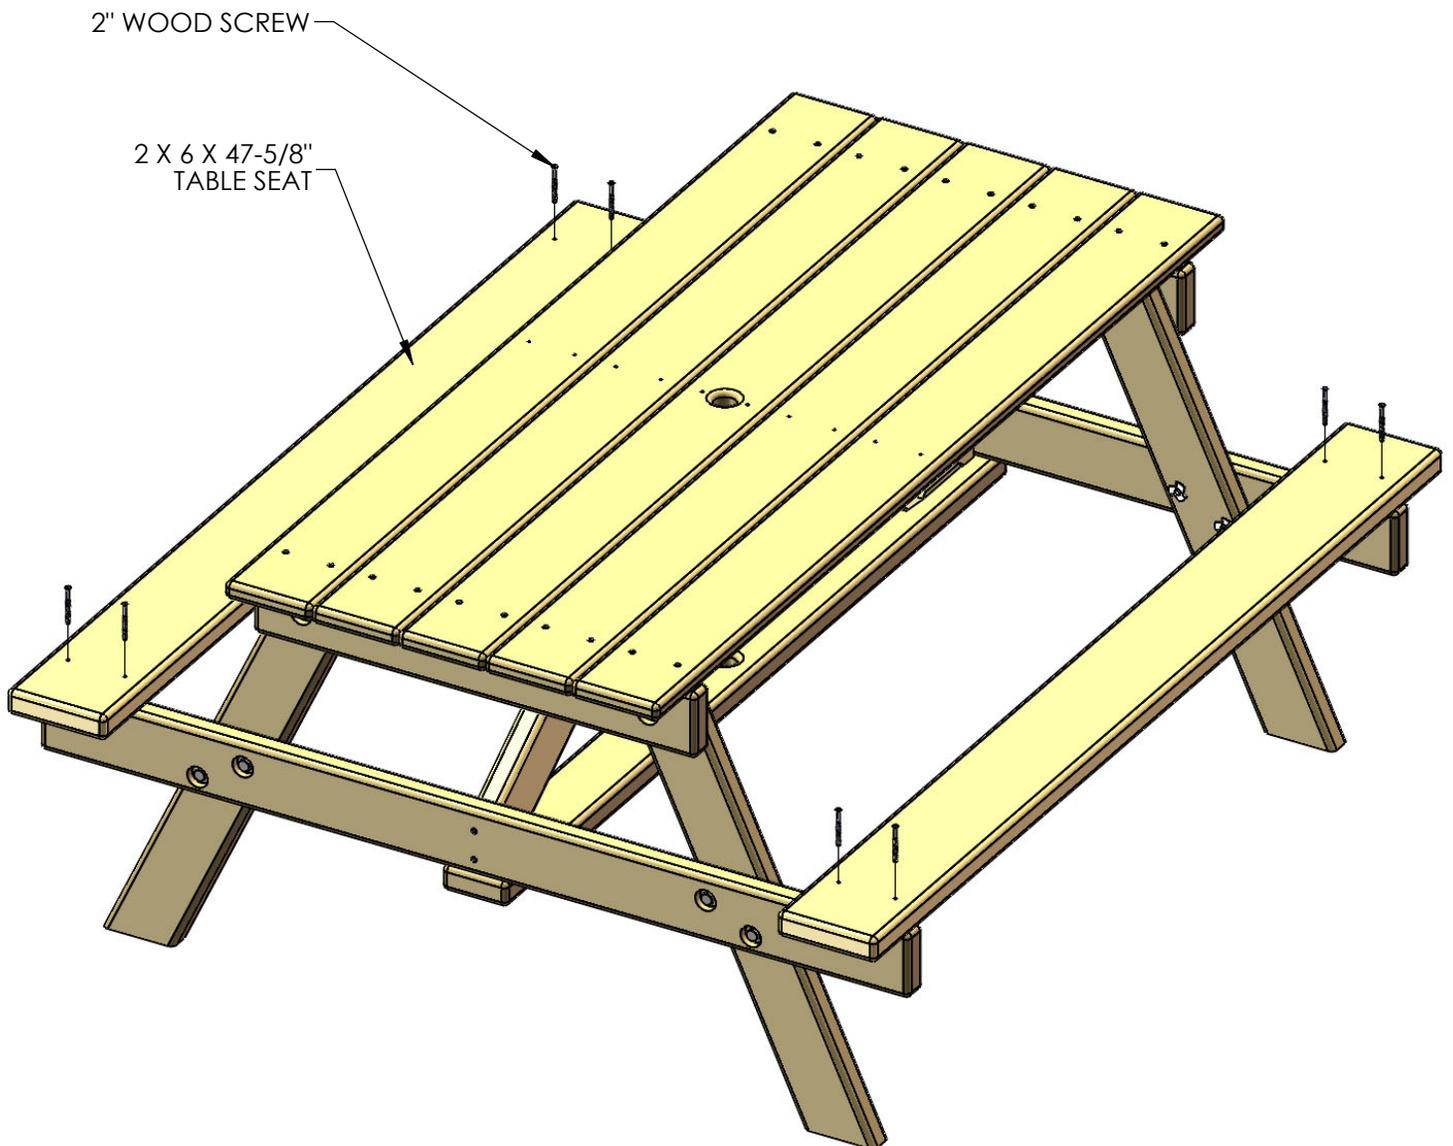

# UMBRELLA ASSEMBLY

1: SCREW THE UPPER PORTION OF THE UMBRELLA ONTO THE LOWER PORTION OF THE UMBRELLA.


2: RAISE THE ROSETTE OF THE UMBRELLA, THEN INSERT THE PIN INTO THE HOLE.

WHEN NOT IN USE THE UMBRELLA SHOULD BE IN THE DOWN POSITION. IN THE WINTER REMOVE THE SET SCREW COLLAR FROM THE LOWER SECTION OF THE UMBRELLA AND STORE THE UMBRELLA AWAY IN SAFE LOCATION.

IF YOUR AREA EXPERIENCES HIGH WINDS OR FREQUENT STORMS YOU MAY WISH TO REMOVE THE UMBRELLA WHEN NOT IN USE. ANY DAMAGE INCURRED DUE TO HIGH WINDS, STORMS, NEGLIGENCE OR MISUSE IS NOT COVERED BY YOUR WARRANTY.



THREAD THE UPPER PORTION OF THE UMBRELLA ONTO THE LOWER PORTION.

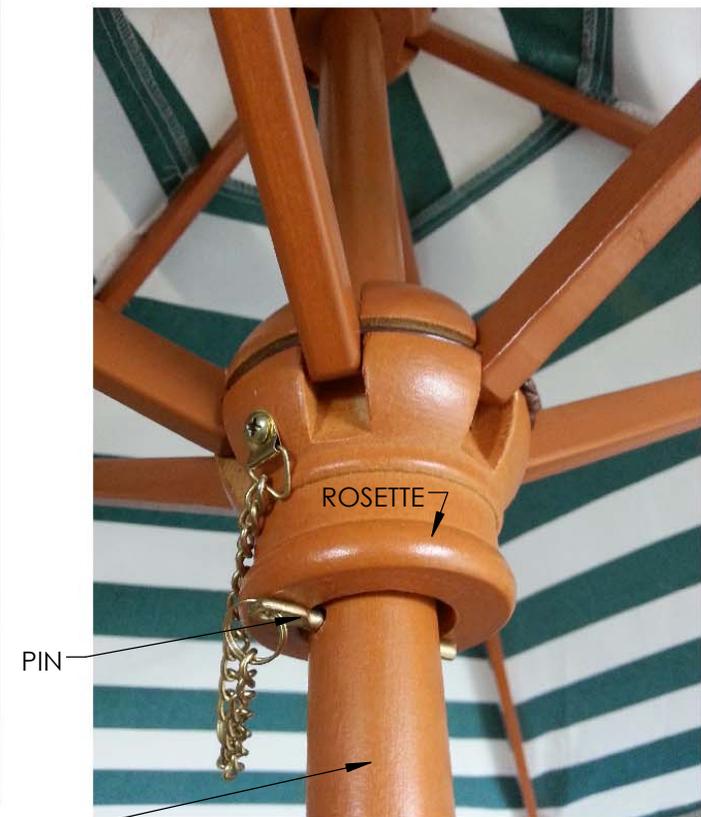

MAST

SLIDE THE ROSETTE OF THE UMBRELLA UP THE MAST. WHEN THE HOLE IS REVEALED, INSERT THE PIN INTO THE HOLE UNTIL IT COMES OUT THE OTHER SIDE.

**WARNING! - TEACH YOUR CHILDREN NOT TO PLAY WITH THE UMBRELLA. THE UMBRELLA IS NOT TO BE USED AS A PIVOT TO SWING AROUND. DO NOT CLIMB OR SLIDE DOWN UMBRELLA MAST. IF THE UMBRELLA BECOMES DAMAGED REMOVE IT AND REPLACE IT WITH A NEW ONE.**