





①

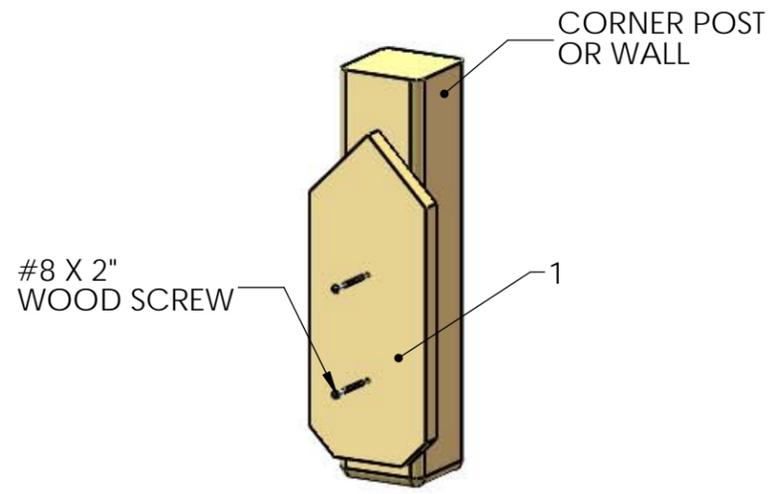


ATTACH THE WALL 1 TO THE CORNER POST OR WALL WITH #8 X 2" WOOD SCREW.


②

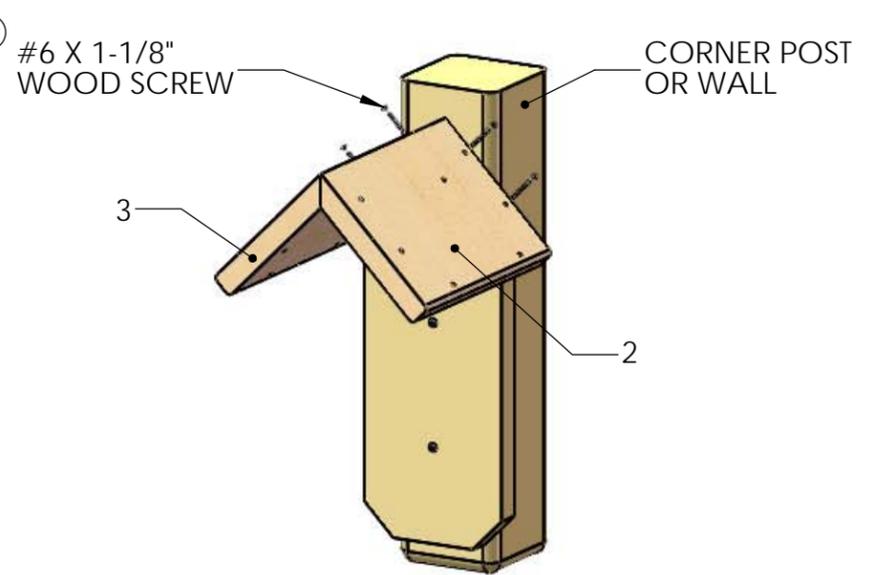


③

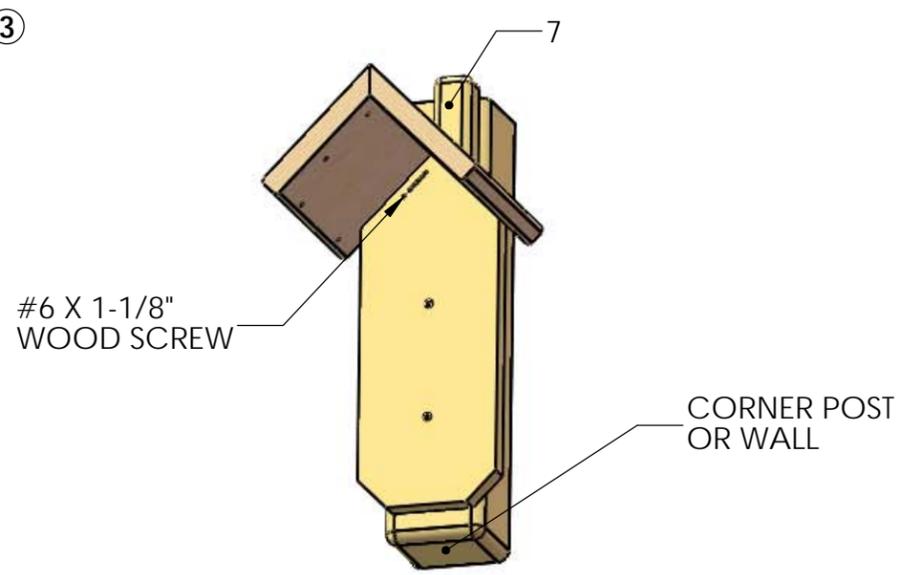


④

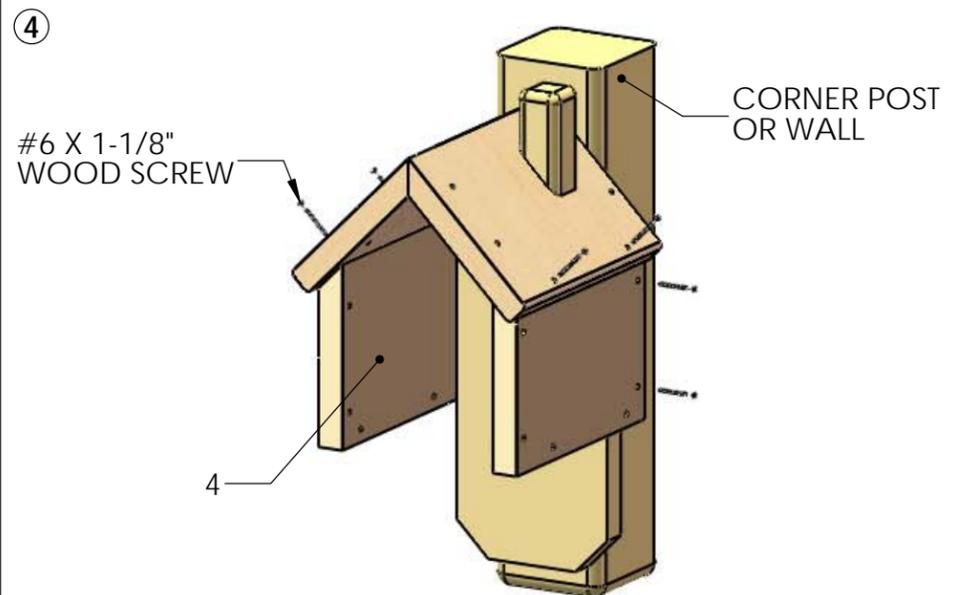

⑤

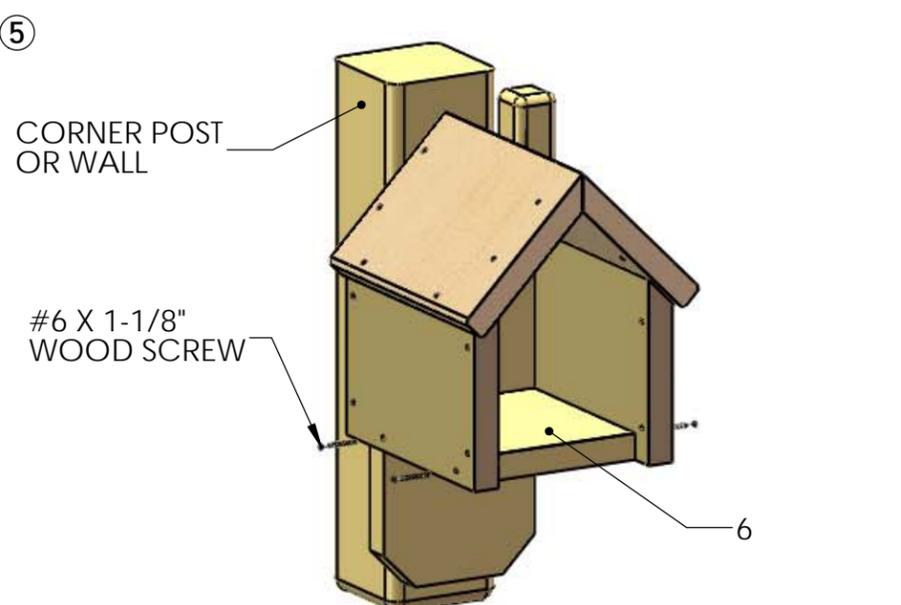

⑥

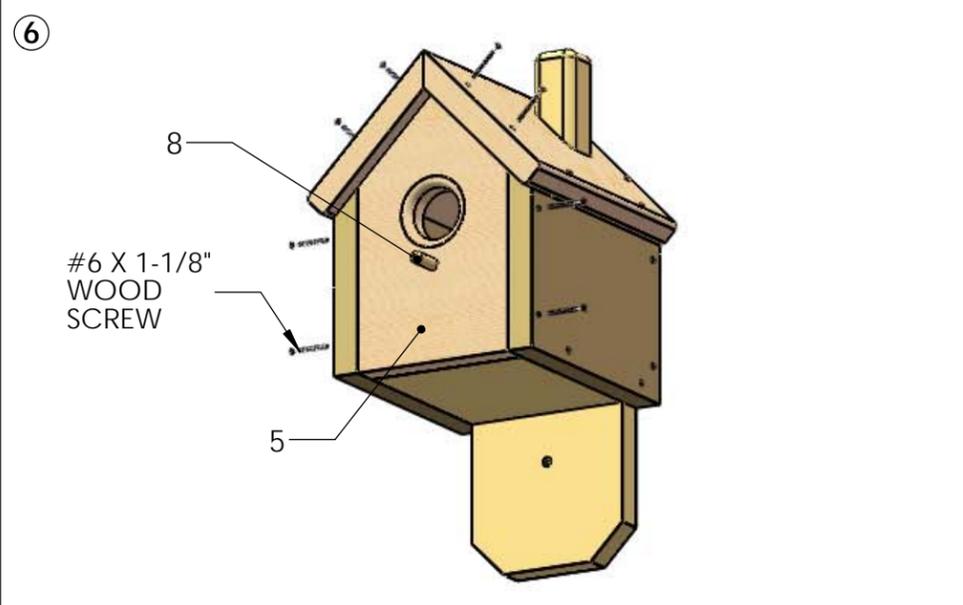

(1)	(2)
(3)	(4) X 2
(5)	(6)
(7)	(8)
(9) x 2	(10) x 25

